

**WX83
AddObserver Runtime**



Thank you for purchasing the AddObserver Runtime. This user's manual contains useful information about the functions and operating procedures of this software. The AddObserver Runtime includes the software, AddObserver Panel. To ensure proper use of the instrument, please read this manual thoroughly before beginning operation. After reading the manual, keep it in a convenient location for quick reference in the event a question arises.

Notes

- The contents of this manual are subject to change without prior notice as a result of improvements in the software's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA.
- Copying or reproduction of all or any part of the contents of this manual without the permission of Yokogawa Electric Corporation is strictly prohibited.
- This software may not be used concurrently on multiple PCs. Use by more than one user is also prohibited.
- This software may not be forwarded to any third party.
- Yokogawa Electric Corporation does not warrant this product after it has been opened, unless there are physical defects in the original setup disk or this document.
- YOKOGAWA will not accept responsibility for any damage caused directly or indirectly as a result of using this software.
- The license number will not be reissued. Please keep the licence number in a safe place.

Trademarks

- DAQWORX, DAQLOGGER, and DAQEXPLORER are registered trademarks or trademarks of Yokogawa Electric Corporation.
- Microsoft, Windows, and Windows Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are registered trademarks or trademarks of Adobe Systems Incorporated.
- Company and product names that appear in this manual are registered trademarks or trademarks of their respective holders.
- The company and product names used in this manual are not accompanied by the registered trademark or trademark symbols (® and ™).

Revisions

- 1st Edition July 2003
- 2nd Edition August 2005
- 3rd Edition March 2006
- 4th Edition June 2007
- 5th Edition January 2009
- 6th Edition January 2011
- 7th Edition October 2011

Software License Agreement

IMPORTANT - PLEASE READ CAREFULLY BEFORE INSTALLING OR USING:

THANK YOU VERY MUCH FOR SELECTING SOFTWARE OF YOKOGAWA ELECTRIC CORPORATION ("YOKOGAWA"). BY INSTALLING OR OTHERWISE USING THE SOFTWARE PRODUCT, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE, DO NOT INSTALL NOR USE THE SOFTWARE PRODUCT AND PROMPTLY RETURN IT TO THE PLACE OF PURCHASE FOR A REFUND, IF APPLICABLE.

Software License Agreement

1. Scope

This Agreement applies to the following software products and associated documentation of Yokogawa (collectively, "Software Product"). Unless otherwise provided by Yokogawa, this Agreement applies to the updates and upgrades of the Software Product which may be provided by Yokogawa.

Software Product: DAQWORX (It is limited to each software that you bought).

2. Grant of License

2.1 Subject to the terms and conditions of this Agreement, Yokogawa hereby grants to you a non-exclusive and non-transferable right to use the Software Product on a single or, the following specified number of, computer(s) and solely for your internal operation use, in consideration of full payment by you to Yokogawa of the license fee separately agreed upon.

Granted number of License: 1 (one)

2.2 Unless otherwise agreed or provided by Yokogawa in writing, the following acts are prohibited:

- a) to reproduce the Software Product, except for one archival copy for backup purpose, which shall be maintained with due care subject to this Agreement;
- b) to sell, lease, distribute, transfer, pledge, sublicense, make available via the network or otherwise convey the Software Product or the license granted herein to any other person or entity;
- c) to use the Software Product on any unauthorized computer via the network;
- d) to cause, permit or attempt to dump, disassemble, decompile, reverse-engineer, or otherwise translate or reproduce the Software Product into source code or other human readable format, or to revise or translate the Software Product into other language and change it to other formats than that in which Yokogawa provided;
- e) to cause, permit or attempt to remove any copy protection used or provided in the Software Product; or
- f) to remove any copyright notice, trademark notice, logo or other proprietary notices or identification shown in the Software Product.

2.3 Any and all technology, algorithms, know-how and process contained in the Software Product are the property or trade secret of Yokogawa or licensors to Yokogawa. Ownership of and all the rights in the Software Product shall be retained by Yokogawa or the licensors and none of the rights will be transferred to you hereunder.

2.4 You agree to maintain the aforementioned property and trade secret of Yokogawa or licensors and key codes in strict confidence, not to disclose it to any party other than your employees, officers, directors or similar staff who have a legitimate need to know to use the Software Product and agreed in writing to abide by the obligations hereunder.

2.5 Upon expiration or termination of this Agreement, the Software Product and its copies, including extracts, shall be returned to Yokogawa and any copies retained in your computer or media shall be deleted irretrievably. If you dispose of media in which the Software Product or its copy is stored, the contents shall be irretrievably deleted.

2.6 The Software Product may contain software which Yokogawa is granted a right to sublicense or distribute by third party suppliers, including affiliates of Yokogawa ("Third Party Software"). If suppliers of the Third Party Software ("Supplier") provide special terms and conditions for the Third Party Software which differ from this Agreement, the special terms and conditions separately provided by Yokogawa shall prevail over this Agreement. Some software may be licensed to you directly by Supplier.

2.7 The Software Product may contain open source software ("OSS"), for which the special terms and conditions separately provided by Yokogawa shall take precedence over this Agreement.

3. Restrictions on Application

3.1 Unless otherwise agreed in writing between you and Yokogawa, the Software Product is not intended, designed, produced or licensed for use in relation to aircraft operation or control, ship navigation or marine equipment control, or ground facility or device for support of the aforesaid operation or control, or for use in relation to rail facility, nuclear related facility, radiation-related equipment, or medical equipment or facility, or under any other circumstances which may require high safety standards.

3.2 If the Software Product is used for the abovementioned purposes, neither Yokogawa nor Supplier assumes liability for any claim or damage arising from the said use and you shall indemnify and hold Yokogawa, Supplier, their affiliates, subcontractors, officers, directors, employees and agents harmless from any liability or damage whatsoever, including any court costs and attorney's fees, arising out of or related to the said use.

4. Limited Warranty

4.1 The Software Product shall be provided to you on an "as is" basis at the time of delivery and except for physical damage to the recording medium containing the Software Product, Yokogawa and Supplier shall disclaim all of the warranties whatsoever, express or implied, and all liabilities therefrom. If any physical defect is found on the recording medium not later than twelve (12) months from delivery, Yokogawa shall replace such defective medium free of charge, provided that the defective medium shall be returned to the service office designated by Yokogawa at your expense within the said twelve (12) months. THIS LIMITED WARRANTY PROVIDED IN THIS CLAUSE IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND WHATSOEVER AND YOKOGAWA HEREBY DISCLAIMS ALL OTHER WARRANTIES RELATING TO THE SOFTWARE PRODUCT, WHETHER EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, NON-INFRINGEMENT, QUALITY, FUNCTIONALITY, APPROPRIATENESS, ACCURACY, RELIABILITY AND RECENCY. IN NO EVENT SHALL YOKOGAWA WARRANT THAT THERE IS NO INCONSISTENCY OR INTERFERENCE BETWEEN THE SOFTWARE PRODUCT AND OTHER SOFTWARE NOR SHALL BE LIABLE THEREFOR. The warranty provisions of the applicable law are expressly excluded to the extent permitted.

4.2 At the sole discretion of Yokogawa, Yokogawa may upgrade the Software Product to the new version number ("Upgrade") and make it available to you at your expense or free of charge as Yokogawa deems fit. In no event shall Yokogawa be obliged to upgrade the Software Product or make the Upgrade available to you.

4.3 Certain maintenance service may be available for some types of Software Product at Yokogawa's current list price. Scope and terms and conditions of the maintenance service shall be subject to those separately provided by Yokogawa. Unless otherwise provided in Yokogawa catalogues or General Specifications, maintenance services will be available only for the latest version and the immediately preceding version. In no event will service for the immediately preceding version be available for more than 5 years after the latest version has been released. In addition, no service will be provided by Yokogawa for the Software Product which has been discontinued for more than 5 years. Notwithstanding the foregoing, maintenance service may not be available for non-standard Software Product. Further, in no event shall Yokogawa provide any service for the Software Product which has been modified or changed by any person other than Yokogawa.

5. Infringement

- 5.1 If you are warned or receive a claim by a third party that the Software Product in its original form infringes any third party's patent (which is issued at the time of delivery of the Software Product), trade mark, copyright or other intellectual property rights ("Claim"), you shall promptly notify Yokogawa thereof in writing.
- 5.2 If the infringement is attributable to Yokogawa, Yokogawa will defend you from the Claim at Yokogawa's expense and indemnify you from the damages finally granted by the court or otherwise agreed by Yokogawa out of court. The foregoing obligation and indemnity of Yokogawa shall be subject to that i) you promptly notify Yokogawa of the Claim in writing as provided above, ii) you grant to Yokogawa and its designees the full authority to control the defense and settlement of such Claim and iii) you give every and all necessary information and assistance to Yokogawa upon Yokogawa's request.
- 5.3 If Yokogawa believes that a Claim may be made or threatened, Yokogawa may, at its option and its expense, either a) procure for you the right to continue using the Software Product, b) replace the Software Product with other software product to prevent infringement, c) modify the Software Product, in whole or in part, so that it become non-infringing, or d) if Yokogawa believes that a) through c) are not practicable, terminate this Agreement and refund you the paid-up amount of the book value of the Software Product as depreciated.
- 5.4 Notwithstanding the foregoing, Yokogawa shall have no obligation nor liability for, and you shall defend and indemnify Yokogawa and its suppliers from, the Claim, if the infringement is arising from a) modification of the Software Product made by a person other than Yokogawa, b) combination of the Software Product with hardware or software not furnished by Yokogawa, c) design or instruction provided by or on behalf of you, d) not complying with Yokogawa's suggestion, or e) any other causes not attributable to Yokogawa.
- 5.5 This section states the entire liability of Yokogawa and its suppliers and the sole remedy of you with respect to any claim of infringement of a third party's intellectual property rights. Notwithstanding anything to the contrary stated herein, with respect to the claims arising from or related to the Third Party Software or OSS, the special terms and conditions separately provided for such Third Party Software or OSS shall prevail.

6. Limitation of Liability

- 6.1 EXCEPT TO THE EXTENT THAT LIABILITY MAY NOT LAWFULLY BE EXCLUDED IN CONTRACT, YOKOGAWA AND SUPPLIERS SHALL NOT BE LIABLE TO ANY PERSON OR LEGAL ENTITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES, OR OTHER SIMILAR DAMAGES OF ANY KIND, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OR DESTRUCTION OF DATA, LOSS OF AVAILABILITY AND THE LIKE, ARISING OUT OF THE USE OR INABILITY TO USE OF THE SOFTWARE PRODUCT, OR ARISING OUT OF ITS GENERATED APPLICATIONS OR DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER BASED IN WARRANTY (EXPRESS OR IMPLIED), CONTRACT, STRICT LIABILITY, TORT (INCLUDING NEGLIGENCE), OR ANY OTHER LEGAL OR EQUITABLE GROUNDS. IN NO EVENT YOKOGAWA AND SUPPLIER'S AGGREGATE LIABILITY FOR ANY CAUSE OF ACTION WHATSOEVER (INCLUDING LIABILITY UNDER CLAUSE 5) SHALL EXCEED THE DEPRECIATED VALUE OF THE LICENSE FEE PAID TO YOKOGAWA FOR THE USE OF THE CONCERNED PART OF THE SOFTWARE PRODUCT. If the Software Product delivered by Yokogawa is altered, modified or combined with other software or is otherwise made different from Yokogawa catalogues, General Specifications, basic specifications, functional specifications or manuals without Yokogawa's prior written consent, Yokogawa shall be exempted from its obligations and liabilities under this Agreement or law.
- 6.2 Any claim against Yokogawa based on any cause of action under or in relation to this Agreement must be given in writing to Yokogawa within three (3) months after the cause of action accrues.

7. Export Control

You agree not to export or provide to any other countries, whether directly or indirectly, the Software Product, in whole or in part, without prior written consent of Yokogawa. If Yokogawa agrees such exportation or provision, you shall comply with the export control and related laws, regulations and orders of Japan, the United States of America, and any other applicable countries and obtain export/import permit and take all necessary procedures under your own responsibility and at your own expense.

8. Audit; Withholding

- 8.1 Yokogawa shall have the right to access and audit your facilities and any of your records, including data stored on computers, in relation to the use of the Software Product as may be reasonably necessary in Yokogawa's opinion to verify that the requirements of this Agreement are being met.
- 8.2 Even after license being granted under this Agreement, should there be any change in circumstances or environment of use which was not foreseen at the time of delivery and, in Yokogawa's reasonable opinion, is not appropriate for using the Software Product, or if Yokogawa otherwise reasonably believes it is too inappropriate for you to continue using the Software Product, Yokogawa may suspend or withhold the license provided hereunder.

9. Assignment

If you transfer or assign the Software Product to a third party, you shall expressly present this Agreement to the assignee to ensure that the assignee comply with this Agreement, transfer all copies and whole part of the Software Product to the assignee and shall delete any and all copy of the Software Product in your possession irretrievably. This Agreement shall inure to the benefit of and shall be binding on the assignees and successors of the parties.

10. Termination

Yokogawa shall have the right to terminate this Agreement with immediate effect upon notice to you, if you breach any of the terms and conditions hereof. Upon termination of this Agreement, you shall promptly cease using the Software Product and, in accordance with sub-clause 2.5, return or irretrievably delete all copies of the Software Product, certifying the same in writing. In this case the license fee paid by you for the Software Product shall not be refunded. Clauses 2.4 and 2.5, 3, 5, 6 and 11 shall survive any termination of this Agreement.

11. Governing Law; Disputes

This Agreement shall be governed by and construed in accordance with the laws of Japan.

Any dispute, controversies, or differences which may arise between the parties hereto, out of, in relation to or in connection with this Agreement ("Dispute") shall be resolved amicably through negotiation between the parties based on mutual trust. Should the parties fail to settle the Dispute within ninety (90) days after the notice is given from either party to the other, the Dispute shall be addressed in the following manner:

- (i) If you are a Japanese individual or entity, the Dispute shall be brought exclusively in the Tokyo District Court (The Main Court) in Japan.
- (ii) If you are not a Japanese individual or entity, the Dispute shall be finally settled by arbitration in Tokyo, Japan in accordance with the Commercial Arbitration Rules of the Japan Commercial Arbitration Association. All proceedings in arbitration shall be conducted in the English language, unless otherwise agreed. The award of arbitration shall be final and binding upon both parties, however, each party may make an application to any court having jurisdiction for judgment to be entered on the award and/or for enforcement of the award.

12. Miscellaneous

- 12.1 This Agreement supersedes all prior oral and written understandings, representations and discussions between the parties concerning the subject matter hereof to the extent such understandings, representations and discussions should be discrepant or inconsistent with this Agreement.
- 12.2 If any part of this Agreement is found void or unenforceable, it shall not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms and conditions. The parties hereby agree to attempt to substitute for such invalid or unenforceable provision a valid or enforceable provision that achieves to the greatest extent possible the economic, legal and commercial objectives of the invalid or unenforceable provision.
- 12.3 Failure by either party to insist on performance of this Agreement or to exercise a right when entitled does not prevent such party from doing so at a later time, either in relation to that default or any subsequent one.

End of document

Overview of This Manual

Structure of This Manual

This manual consists of three chapters and an index as shown below.

Chapter	Title	Description
1	Before Using the Software	Gives an overview of the AddObserver Runtime. Also provides a list of PC system requirements and instructions for installing the software.
2	Monitoring with AddObserver Panel	Explains how to use a panel to monitor measured data, how to configure label displays, and how to display trend graphs.
3	Responding to Error Messages	Lists each error message and their corrective actions, and explains how to check the version of the AddObserver Panel.
Index		An alphabetical index.

Scope of This Manual

This manual does not explain the basic operations of your PC's operating system (OS). For specific information on your operating system please refer to the user's guide that came with it.

Conventions Used in This Manual

- **Units**

K: Denotes *1024*. Example: 100 KB
M: Denotes *1024 K*. Example: 10 MB
G: Denotes *1024 M*. Example: 2 GB

- **Bolded Items**

Items set in boldface mainly refer to on-screen interface elements such as menus, commands, dialog boxes, and buttons, or keys on the keyboard.

- **Headings Used for Descriptions of Operations**

The following headings are used to distinguish procedural instructions from other information given in chapters 1 through 3.

Procedure

This subsection contains the operating procedure used to carry out the function described in the current section. All procedures are written with inexperienced users in mind; experienced users may not need to carry out all the steps.

Note

Calls attention to information that is important for proper operation of the instrument.

Contents

1

Software License Agreement	ii
Overview of This Manual	iv

2

Chapter 1 Before Using the Software

1.1 Overview of the AddObserver Runtime	1-1
1.2 System Requirements and Supported Monitor Servers	1-7
1.3 Connecting to the Monitor Server	1-9

3

Chapter 2 Monitoring with AddObserver Panel

2.1 Starting AddObserver Panel	2-1
2.2 Opening the Panel, Connecting to the Monitor Server, and Checking the Communication Status	2-2
2.3 Switching Label Displays	2-4
2.4 Pausing and Resuming the Panel Display	2-5
2.5 Disconnecting/Reconnecting the Monitor Server	2-6
2.6 Restricting Operation of Out Objects	2-7
2.7 Changing the Trend Graph, Extended Trend Graph, and X-Y Graph Display Method	2-8
2.8 Operating the Tab Display	2-14
2.9 Operating a Numeric Out Object	2-15
2.10 Operating the Selectable Out Object	2-16
2.11 Operating Temperature Controller Parts	2-17
2.12 Playing, Stopping, and Acknowledging Alarm Sounds	2-19
2.13 Closing the Panel	2-20
2.14 Exiting AddObserver Panel	2-21

Index

Chapter 3 Responding to Error Messages


3.1 Error Messages and Their Corrective Actions	3-1
3.2 Checking the Version of the AddObserver Panel	3-2

Index

1.1 Overview of the AddObserver Runtime

AddObserver Runtime

AddObserver Runtime Package is a monitoring application that connects with monitor servers from YOKOGAWA'S DAQ32 Plus, DAQEXPLORER, DAQLOGGER, MXLOGGER, GateCONTROL and GateEye, and displays the acquired measurement data on user-created monitor screens. The monitoring screen (panel) can be custom-ordered through one of our representatives.

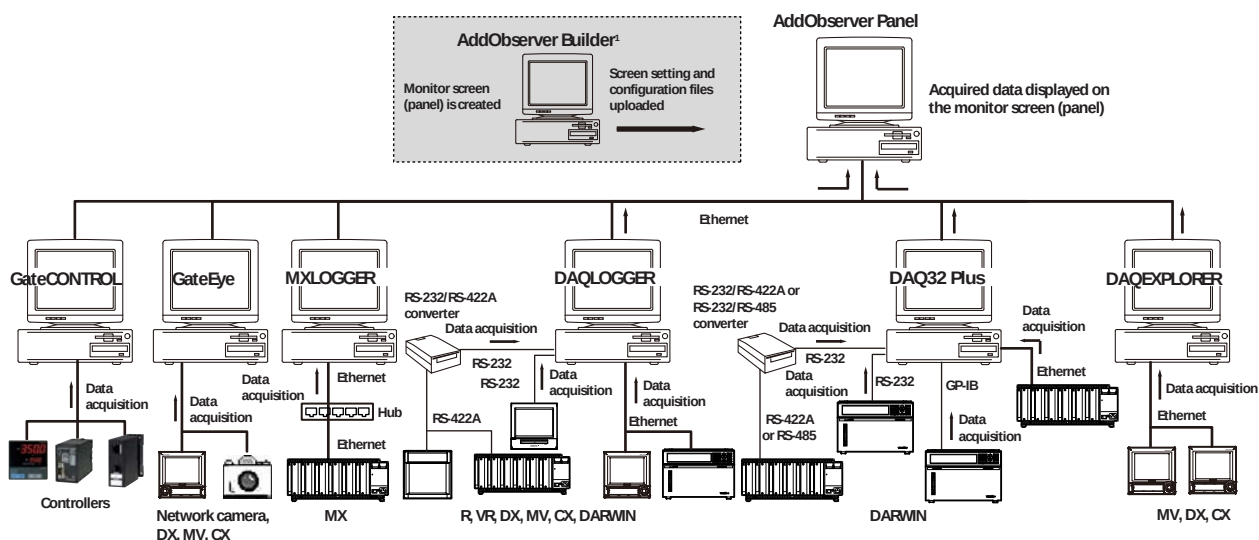


¹ The AddObserver Runtime Package does not include the software, AddObserver Builder. Please inquire with one of our representatives for more information on AddObserver Builder, the development tool for creating monitor screens.

The software's main functions are as follows:

- Reads in the setting files (with extension .gob) and configuration files (with extension .cob) for the monitor screen (panel) created by our representative, and allows you to monitor measurement data acquired on the DAQ32 Plus, DAQEXPLORER, DAQLOGGER, MXLOGGER, or GateCONTROL and Screen data on the GateEye.
- Allows you to switch to labels to display channel numbers, tag numbers, and tag comments.
- Displays data from multiple monitor servers (DAQ32 Plus, DAQEXPLORER, or DAQLOGGER), GateCONTROL and GateEye on a single panel.
- Able to connect with up to 16 servers simultaneously.
- Displays up to 16 screens.

An Example of a Panel and Its Objects

- **Example Panel**

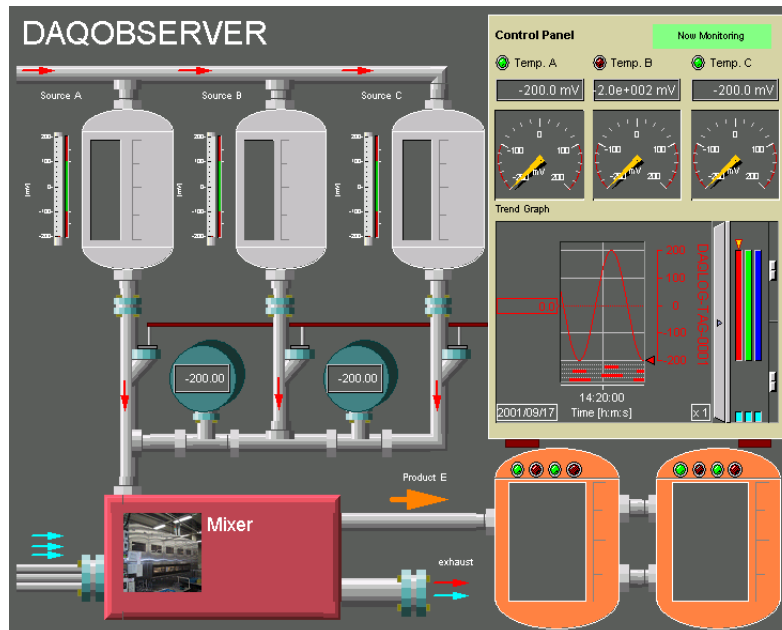

- **Panel Objects**

A panel is made up of objects that display such information as measured data, waveforms, and alarms.

- **Value Rectangle**

Displays the value of a specified channel in a rectangle whose top and bottom sides correspond to the maximum and minimum values for that channel.




- **Indicator**

Displays the specified alarm. Blinks red during an alarm, and lights green when no alarm is occurring. Remains black if no alarms are specified.




- **Digital**

Displays the value of the specified channel in digital format.



- **Bar Meter**

Displays the value of the specified channel in bar format.

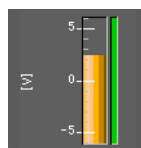


- **Analog Meter**

Displays the value of the specified channel on an analog dial.



- **Thermometer**

Displays the value of the specified channel on a thermometer.




- **Meter Set**

Meter sets consist of a tag, four indicators, and a meter object. Tags display the tag name of the specified channel. Indicators display alarms 1 through 4 on the specified channel in order from left to right. Meter objects display the value of the specified channel in digital, analog, bar, or thermometer formats.


- **Digital Meter Set**

A meter set with a digital meter.



- **Bar Meter Set**

A meter set with a bar meter.




- **Analog Meter Set**

A meter set with an analog dial.



- **Thermometer Set**


A meter set with a thermometer.



1.1 Overview of the AddObserver Runtime Package

- **Trend Graph**

Displays waveforms for the specified channels.

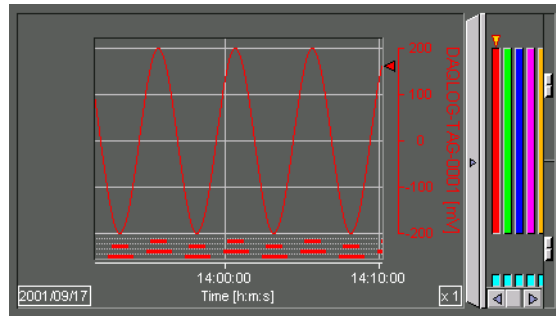

- **Picture**

A user-specified bitmapped image.



- **Button**


Performs one of the following functions that is assigned to the button.

- Acknowledge the alarm occurrence and stop the alarm sound.
- Show the monitor window that is assigned to the button.
- Hide the monitor window that is assigned to the button.



- **Monitor**


Arranges the GateEye images.

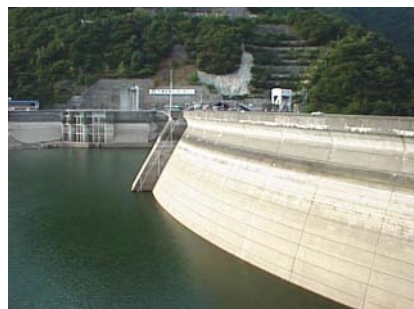

- **Numeric Out**

Sends numerical values to the I/O Channel host.

Displays the values from the channels corresponding to output channels.




- **Selectable Out**
Selects strings to which numerical values are registered and sends them to the I/O Channel host.
Converts values from channels corresponding to output channels to character strings registered on the builder and displays them.



- **Temperature Controller Parts**
Displays the screens of the temperature controller parts to which controllers were assigned.



- **Extended Trend Graph**
The extended trend graph displays up to 1600 of the same FIFO channels.

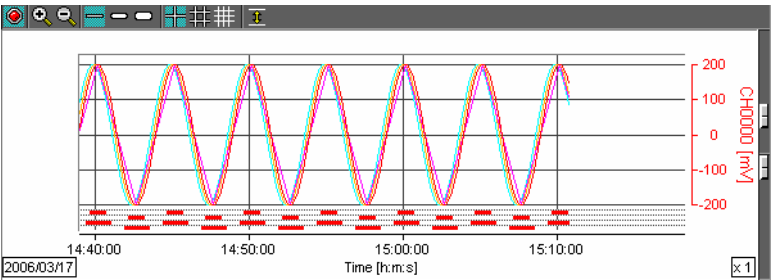


- **Extended Indicator**
Blinks in the color specified for alarms in AddObserver when an alarm occurs on one of the several assigned channels (alarms). If an alarm occurred in the past, the outline of the extended indicator blinks in red. If you click the indicator, just the outline returns to normal.



1.1 Overview of the AddObserver Runtime Package

- **X-Y Graph**

The X-Y graph displays waveforms from up to 32 channels each on the X and Y axes. Only the number of data specified on AddObserver Builder are displayed as waveforms. The operation of the graph is the same as that of the trend and extended trend graph.

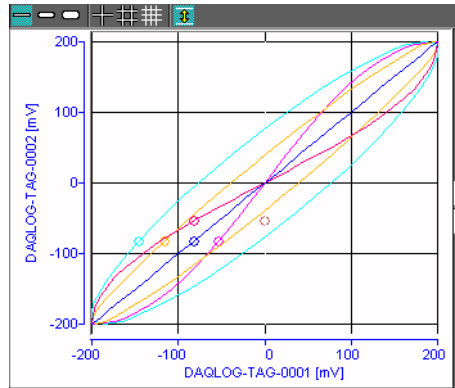

- **Alarm Summary**

Up to 100 past alarms can be displayed in specified channel rang.

The figure shows a window titled 'Alarm Summary' displaying a list of alarms. Each entry includes a status icon (green up arrow for Off, red down arrow for On), a timestamp, a tag name, and a level/status. The list is as follows:

Status	Timestamp	Tag	Level	Status
Off	2006/03/17 15:15:45.000	DAQLOG-TAG-0003 L1	H	Off
Off	2006/03/17 15:16:05.000	DAQLOG-TAG-0001 L3	H	Off
Off	2006/03/17 15:16:05.000	DAQLOG-TAG-0002 L3	H	Off
Off	2006/03/17 15:16:05.000	DAQLOG-TAG-0003 L3	H	Off
On	2006/03/17 15:16:55.000	DAQLOG-TAG-0001 L4	L	On
On	2006/03/17 15:16:55.000	DAQLOG-TAG-0002 L4	L	On
On	2006/03/17 15:16:55.000	DAQLOG-TAG-0003 L4	L	On
On	2006/03/17 15:17:10.000	DAQLOG-TAG-0001 L2	L	On
On	2006/03/17 15:17:10.000	DAQLOG-TAG-0002 L2	L	On
On	2006/03/17 15:17:10.000	DAQLOG-TAG-0003 L2	L	On
On	2006/03/17 15:17:15.000	DAQLOG-TAG-0004 L4	L	On

1.2 System Requirements and Supported Monitor Servers

PC System Requirements

- **Operating System (OS)**

Run DAQWORX under any of the following operating systems.

- Windows 2000 Professional SP4
- Windows XP Home Edition SP3
- Windows XP Professional SP3 (excluding Windows XP Professional x64 Editions)
- Windows Vista Home Premium SP2 (excluding the 64-bit editions)
- Windows Vista Business SP2 (excluding the 64-bit editions)
- Windows 7 Home Premium, SP1 (32-bit and 64-bit editions)
- Windows 7 Professional, SP1 (32-bit and 64-bit editions)

The language displayed by the software under different language versions of the OS are as follows.

OS Language	Software Language
Japanese	Japanese
Other	English

- **PC**

A PC that runs one of the OS above, and that meets the following CPU and memory requirements.

When Using Windows 2000 or Windows XP

Pentium 4, 1.6 GHz or faster Intel x64 or x86 processor; 512 MB or more of memory

When Using Windows Vista

Pentium 4, 3 GHz or faster Intel x64 or x86 processor; 2 GB or more of memory

When Using Windows 7

32-bit edition: Intel Pentium 4, 3 GHz or faster x64 or x86 processor; 2 GB or more of memory

64-bit edition: Intel x64 processor that is equivalent to Intel Pentium 4, 3 GHz or faster ; 2 GB or more of memory

- **Hard Disk**

Free disk space: 200 MB or more

- **CD-ROM Drive (for Use during Installation)**

- **Mouse**

A mouse supported by the OS.

- **Monitor**

A video card that is recommended for the OS and a display that is supported by the OS, has a resolution of 1024×768 or higher, and that can show 65,536 colors (16-bit, high color) or more.

- **Communications Interface**

An Ethernet port supported by your operating system. Also, TCP/IP must be installed.

Note

- Do not use the time zone settings in the Windows Autoexec.bat file. If you see lines such as TZ-GTM0 in your Autoexec.bat file, deactivate them by inserting a REM command in front.
- This software will not support data acquired after the year 2038.

Supported Monitor Servers

AddObserver Panel can connect to the following five monitor servers.

- DAQ32 Plus
- DAQEXPLORER (R2.03 or later)
- DAQLOGGER
- MXLOGGER
- GateCONTROL
- GateEye

Note

- The AddObserver can connect with up to 16 monitor servers simultaneously.
 - To maximize connection speeds, we recommend that you reduce the traffic on the network when using the DAQ32 Plus and DAQLOGGER, and make sure that you are running the latest version of the software.
-

1.3 Connecting to the Monitor Server

To use the functions of this software, it is necessary to connect to either the DAQ32 Plus, DAQEXPLORER, DAQLOGGER, or MXLOGGER monitor server and GateEye. Connect to the server you will be using, then proceed to chapter 2, "Using the AddObserver Panel."

Procedure

For DAQ32 Plus

1. Start DAQ32 Plus. For details, see section 2.1, "Launcher Software" in the DAQ32 Plus User's Manual (IM DP320-61E).
2. Start the logger software. For details, see section 5.1, "Operating Logger Software" in the DAQ32 Plus User's Manual (IM DP320-61E).
3. Start the monitor server. For details, see section 5.16, "Using the Monitor Server" in the DAQ32 Plus User's Manual (IM DP320-61E).

For DAQEXPLORER

Start DAQEXPLORER R2.03 or later (DAQ Desktop). For details, see section 2.1, "Starting and Exiting the DAQ Desktop" in the DAQEXPLORER User's Manual (IM 04L02A01-62E).

For DAQLOGGER

1. Start the DAQLOGGER. For details, see section 2.3, "Starting DAQLOGGER" in the DAQLOGGER User's Manual (IM 04D05C01-62E).
2. Start the monitor server. For details, see section 2.12, "Setting Up the Monitor Server" in the DAQLOGGER User's Manual (IM 04D05C01-62E).

For MXLOGGER

1. Start the MXLOGGER. For details, see the MXLOGGER User's Manual (IM WX103-01E).
2. Start the monitor server. For details, see the MXLOGGER User's Manual (IM WX103-01E).

For GateCONTROL

Start the GateCONTROL. For details, see the GateCONTROL User's Manual (IM WX1-07E).

For GateEye


Start the GateEye. For details, see the GateEye User's Manual (IM WX1-01E).

2.1 Starting AddObserver Panel

Procedure

Select **Start > Programs > YOKOGAWA DAQWORX > AddObserver Runtime > Panel**.

AddObserver Panel starts, and the Panel screen is displayed.

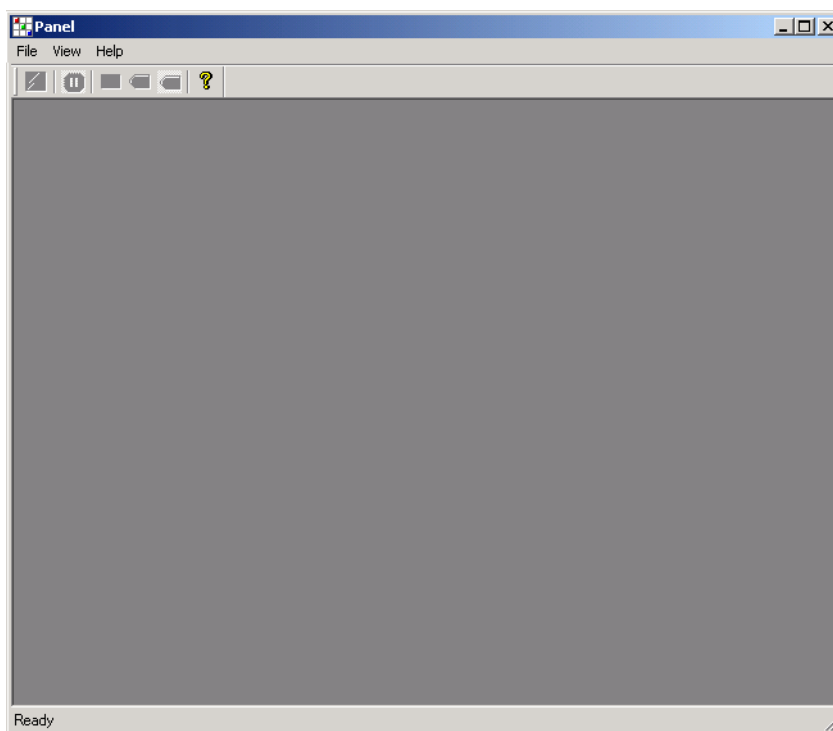


Note

When installing AddObserver Panel from the AddObserver, select **Start > Programs > YOKOGAWA DAQWORX > AddObserver > Panel**.


2.2 Opening the Panel, Connecting to the Monitor Server, and Checking the Communication Status

Opening the Panel Procedure

1. Choose **File > Open**.



The **Open** dialog box is displayed.

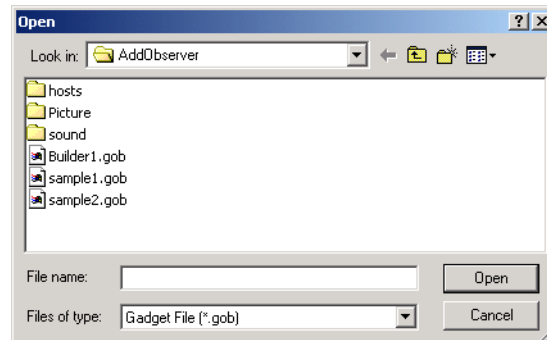


2. In the **Look in** list, select the location of the desired file, then in the **Files of type** list select Gadget File (*.gob), and finally, in the **File name** box type or select the name of the desired file.

Note

- A maximum of 16 panels can be opened at the same time.
- If you open a panel on which a monitor window was added and created using ADDOBSERVER Builder, the sub windows are also opened at the same time. However, the sub windows set to hide are not opened.
- There are two file types associated with this software, .gob and .cob. Only the .gob files can be opened by the panel. The .gob and .cob files exist as a pair. If you delete a .cob file or change its name, the corresponding .gob file will become unreadable.

3. Click **Open**. The selected panel opens.

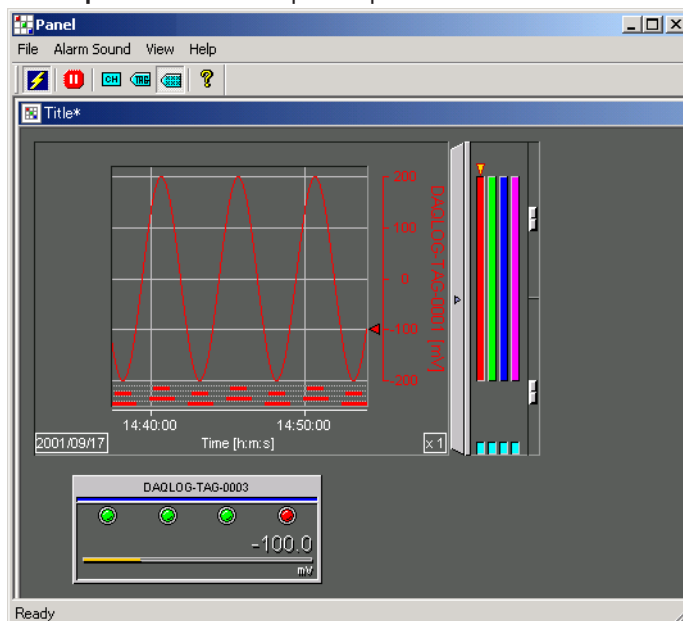

Connecting to the Monitor Server

If you have already established a connection to the monitor server, the software automatically accesses the connection when you open a panel.


Note

- To establish a connection ahead of time, follow the instructions in section 1.4, "Connecting to the Monitor Server" before opening a panel.
- The measured data displayed in the panel is linked to the objects used when the panel was created with the development tool. If the measured data transmitted to the monitor server on the DAQ32 Plus, DAQEXPLORER, DAQLOGGER, MXLOGGER, GateCONTROL, or GateEye changes, the measured data displayed in the panel also changes.


Checking the Communication Status

Procedure

Choose **View > Comm. Status**.

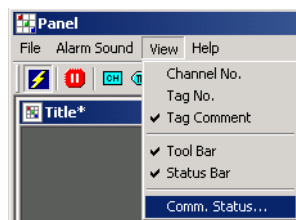

The Communication Status window is displayed.

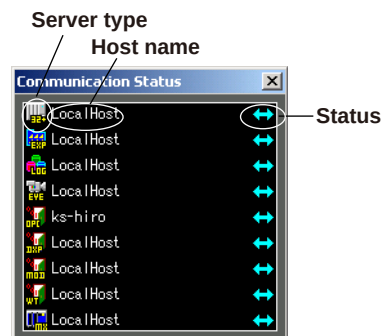

The contents of the Communication Status windows consist of the following three items.

- **Server Type**

-  — DAQ32 Plus monitor server
-  — DAQEXPLORER monitor server
-  — DAQLOGGER monitor server
-  — MXLOGGER monitor server
-  — GateCONTROL
-  — GateEye
-  — Failed or unrecognized connection

- **Host Name**

The name of the connected host.

- **Status**



-  — (Red) Connection failed.
-  — (Yellow) Connection not complete. Attempting to connect.
-  — (Blue) Connection successful.

2.3 Switching Label Displays

You can switch a label to display the channel number, tag number, or tag comment.

Procedure

Select **Channel No.**, **Tag No.**, or **Tag Comment** from the **View** menu, or click the **Channel No.**, **Tag No.**, or **Tag Comment** buttons on the toolbar. The label displays will change accordingly.

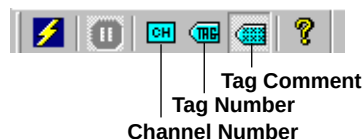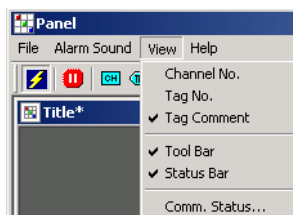

Note

The View menu's Channel No., Tag No., and Tag Comment commands are only available when a panel is open.


2.4 Pausing and Resuming the Panel Display

Pause and resume the display update during monitoring.

Pausing the Panel Display

Procedure

Select **File > Pause**, or click the **Pause** button on the toolbar. The panel's display pauses.


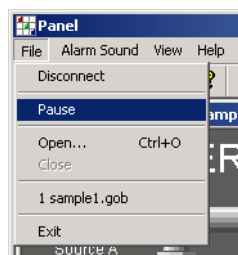


Pause button

Resuming the Panel Display

Procedure

While the display update is paused, select **File > Pause**, or click the **Pause** button on the toolbar. The panel's display resumes.

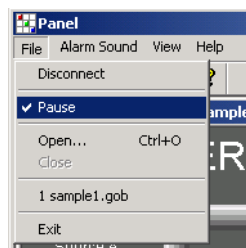

Pause button

Note



You can change the display format for trend graphs, extended trend graphs, and X-Y graphs while the panel display is paused. For details, see section 2.7.

2.5 Disconnecting/Reconnecting the Monitor Server

Disconnecting from the Monitor Server

Procedure

Select **File > Disconnect**, or click the **Connect/Disconnect** button on the toolbar.


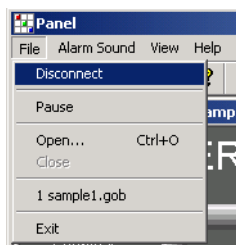


Connect/Disconnect button

Reconnecting to the Monitor Server

Procedure

While the server is disconnected, select **File > Connect**, or click the **Connect/Disconnect** button on the toolbar.

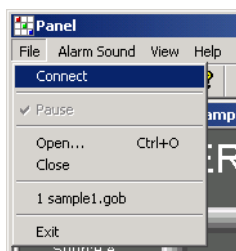

Connect/Disconnect button

Note

You can change the display format for trend graphs, extended trend graphs, and X-Y graphs while the monitor server is disconnected. For details, see section 2.7.

2.6 Restricting Operation of Out Objects

Out objects can only be operated by users who can log in at or above the protection level specified for the object (0, 1, 2, 3), and is disabled for users who cannot login.

If the protection level is 0, operation is not restricted.

A protection level can be set for the following objects.

- Temperature controller parts
- Numeric out objects
- Selectable out objects


Protection is enabled when the panel file specified by the user in AddObserver is opened. The user name and password are entered, and login succeeds only if there is a match. If another user is logged in, usage is restricted to the protection level of any user logging in thereafter. The panel file is restricted by the protection level of the user from login to logout, or of any subsequent user from that user's login to logout. When no users are logged in, only objects of protection level 0 can be operated.

Logging In Procedure

1. From the Protect menu, choose Login.



2. Enter the user name and password in the dialog box and click the Login button.

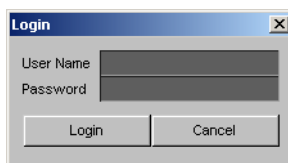

Logging Out Procedure

1. From the Protect menu, choose Logout.



2.7 Changing the Trend Graph, Extended Trend Graph, and X-Y Graph Display Method

When a graph (Trend Graph, Extended Trend Graph, or X-Y Graph) is included in the panel, the graph's display format can be changed in the following instances (when the graph display change toolbar is displayed).

- When the panel display is paused (section 2.4)
- When the monitor server is disconnected (section 2.5)

The following is a description of the main display items. Items not explained herein are the same as for the DAQ32 Plus, DAQEXPLORER, DAQLOGGER, MXLOGGER, or GateEye. Refer to the respective user's manual for those items.

Graph Display Setting Toolbar Items


- Alarm²
- Zoom In²/Zoom Out²
- User Zone¹/Edit Zone¹/Full Zone¹/Slide Zone¹/Auto Zone¹/Multi-Axes Zone¹
- Normal Line/Medium Line/Thick Line
- Grid density (three types)
- Clip
- Grid color/Background color/Curtain¹/Scroll bar¹
 - 1 Trend Graph only
 - 2 Trend Graph and Extended Trend Graph only

Note

The extended trend graph can display 1600 channels, but the speed of the display update may decrease as the number of display channels increases.

Procedure


1. Pause the panel display or disconnect the monitor server (for details, see section 2.4 or 2.5). The trend graph display icons are displayed.

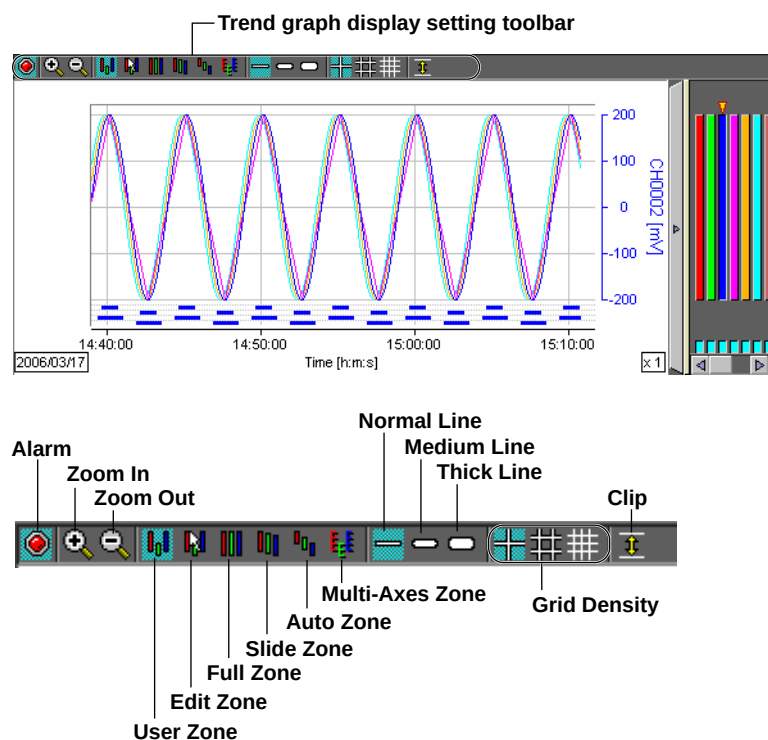

- **Displaying Alarms**

You can turn alarm displays ON and OFF.


2. Click the **Alarm** button on the toolbar. The alarm status (tag) for each channel is displayed. However, no alarms will be displayed if the data being read has no alarm data.

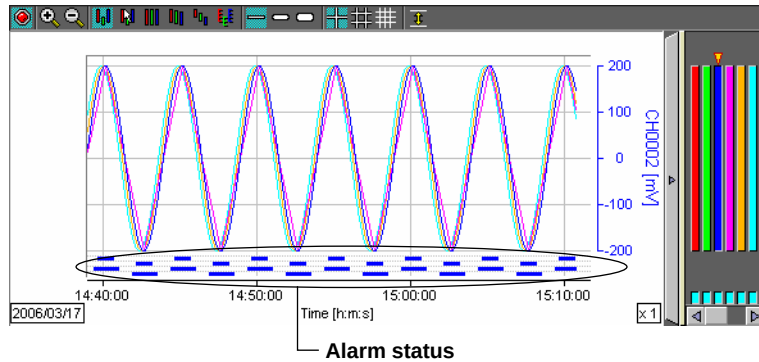

- **Zooming In and Out on the Time Axis**

You can adjust the time axis of the displayed waveform.

2. Click the **Zoom In** or **Zoom Out** button on the toolbar. The waveform is zoomed in and out along the time axis (horizontally).

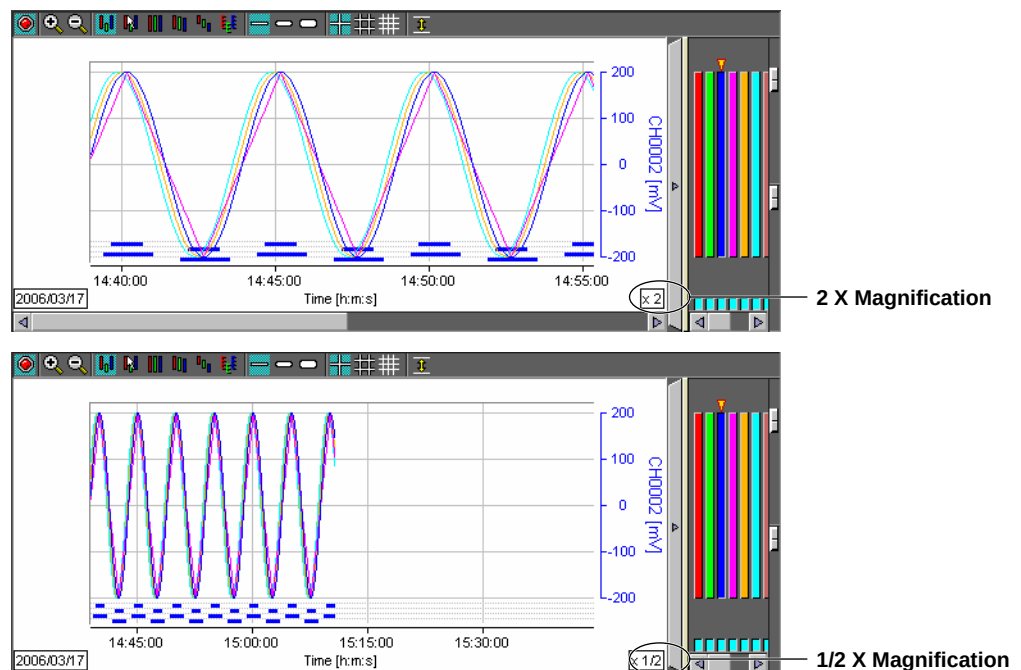

Note

- There are five zoom in levels: 1, 2, 5, 10, and 20.
- There are nine zoom out levels: 1/1000, 1/500, 1/200, 1/100, 1/50, 1/20, 1/10, 1/5, and 1/2. However, since the displayable zoom factor varies depending on the number of pixels in the area of the displayed waveform, the zoom factor changes with the size of the panel screen.
- Depending on the zoom factor, the date and time format is automatically switched (for example, MM/DD HH:MM or HH:MM:SS etc.)

2.6 Changing the Trend Graph Display Method


- **Selecting a Y-Axis Display Zone**

You can change the waveform display method.

2. Click **User Zone**, **Edit Zone**, **Full Zone**, **Slide Zone**, **Auto Zone**, or **Multi-Axes Zone** on the toolbar.


User Zone

Set the y-axis as a user zone. This causes the zone to be uneditable using the panel.

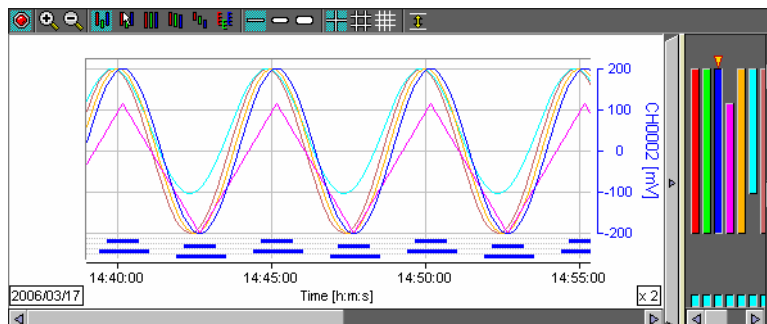


Edit Zone

Set the y-axis as an editable zone. The zone can be edited in the trend graph's zone display area. In the zone display area, drag the handle on the upper or lower edge of the zone bar to change the zone.

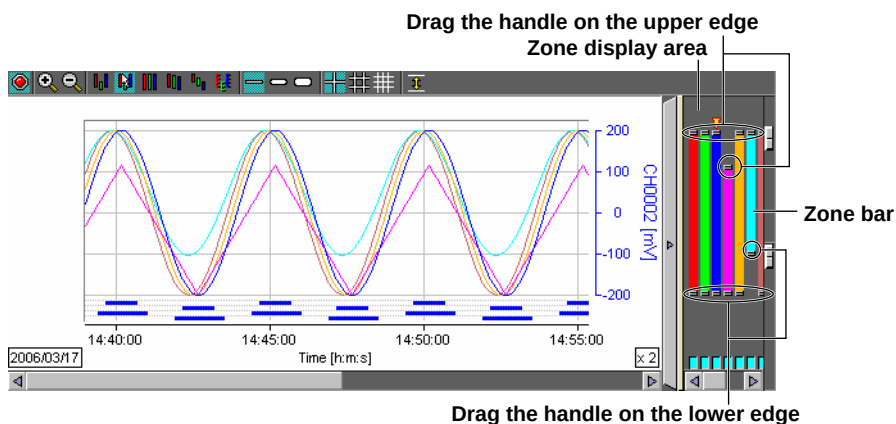


Full Zone

Assigns the zone to all the currently displayed waveforms.

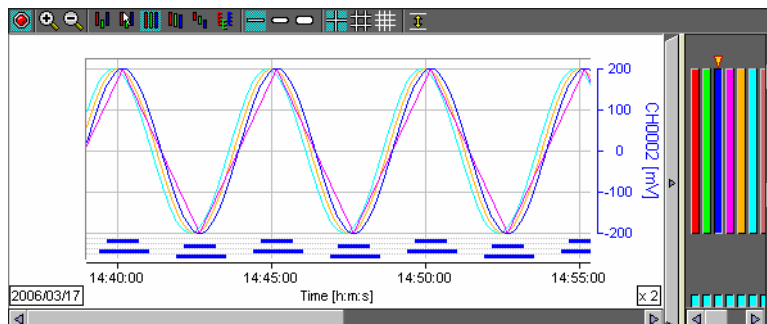


Slide Zone


Unifies the widths of each waveform's zone, then staggers the starting position of each zone.

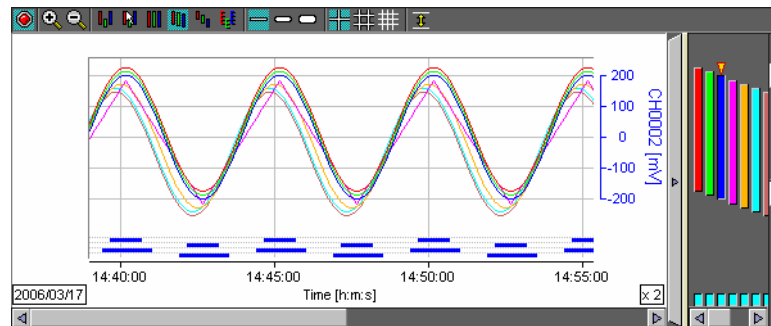**Auto Zone**

Accounts for the number of displayed waveforms and divides up their waveform display areas equally.

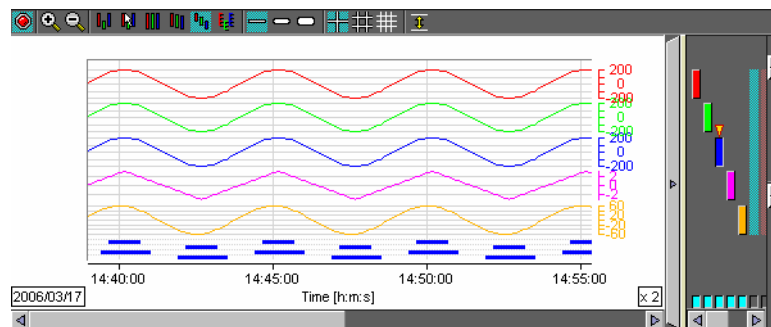**Multi-Axes Zone**

Displays multiple y-axes (scales). By dragging the zone bar/y-axis of the waveforms whose Waveform Display ON/OFF Boxes are ON, you can turn the y-axis display ON and OFF.

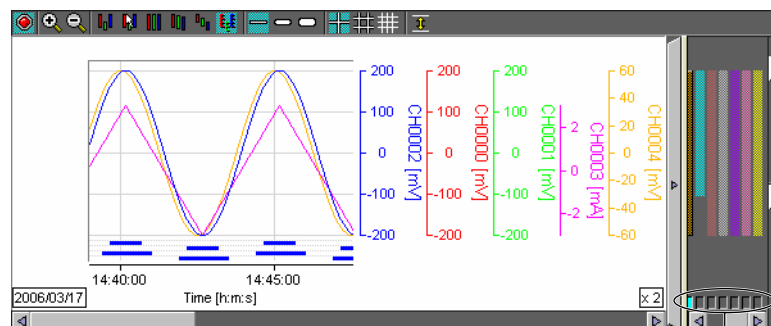

Click the waveform display ON/OFF button


2.6 Changing the Trend Graph Display Method

- **Changing the Line Thickness**


You can change the line thickness of the displayed waveform. The default setting is Normal Line.

2. Click the **Normal Line**, **Medium Line**, or **Thick Line** button on the toolbar.

Medium Line

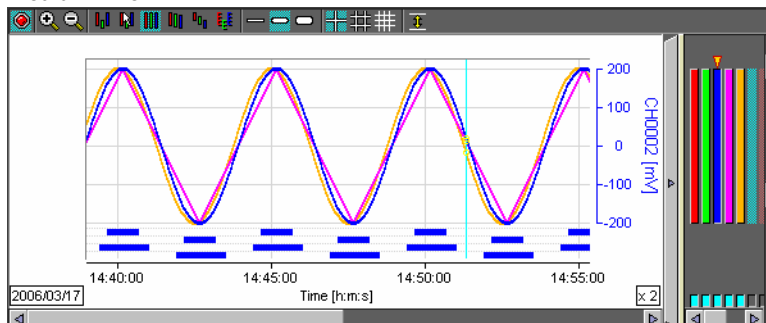


Thick Line

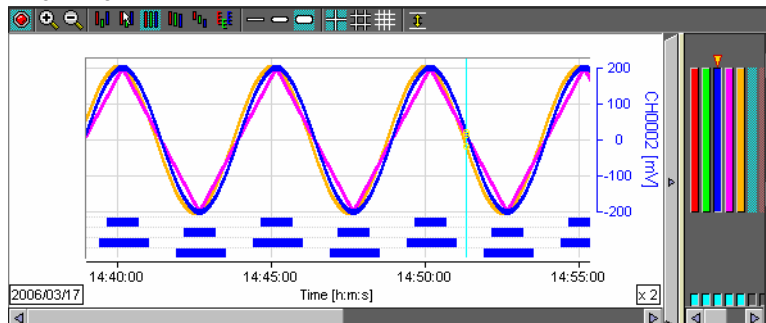

- **Changing the Grid Display**

You can select one of three grid types.

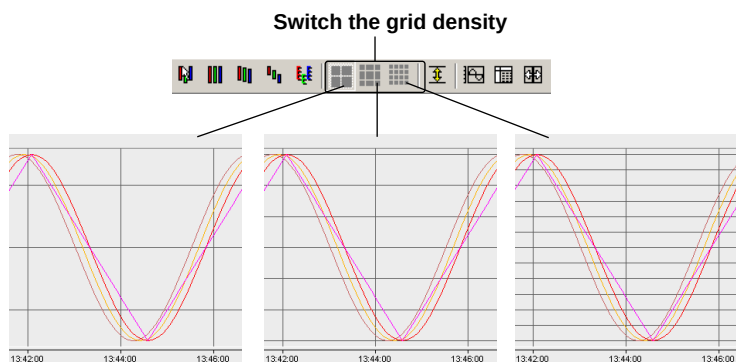

- **Applying a Display Limit (Clip)**

You can specify how waveforms outside of the display range are displayed.

2. Click the **Clip** button on the toolbar.

With Limit Applied




Without Limit Applied



The displayed area of the waveform along the y-axis is limited by the specified minimum and maximum range values. Measured values lower than the minimum are displayed at the minimum value of the scale, and values higher than the maximum are displayed at the maximum value of the scale.

- **Grid Color/Background Color/Curtain/Scroll Bar**

The grid color, background color, and curtain can be adjusted while connected to the monitor server or while the panel display is not paused. The scroll bar is only available when disconnected from the monitor server or when the panel display update is paused.

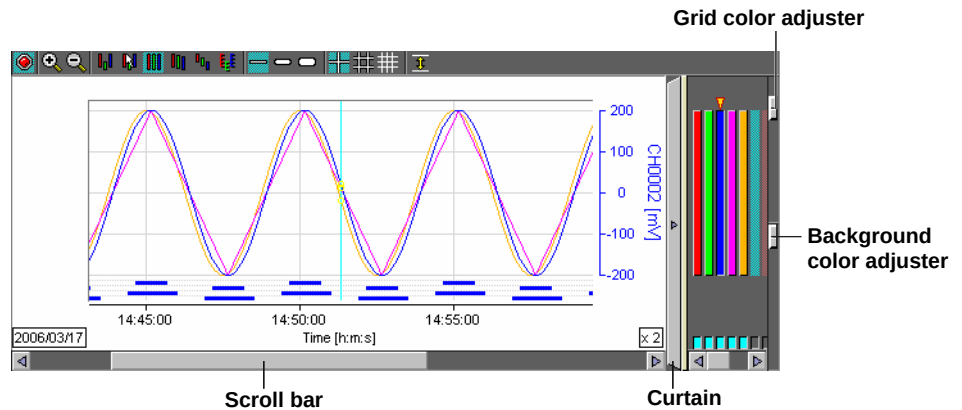

Grid Color Adjuster

Adjusts the brightness of the grid.

Background Color Adjuster

Adjusts the brightness of the background.

Curtain


Hides or reveals the zone display area.

Scroll Bar

Adjusts the position of the displayed waveforms.

Changing the X-Y Graph Display Method

If the X-Y graph's Clip property is turned ON (blue) in AddObserver, the X-Y graph displays the most recent data position.

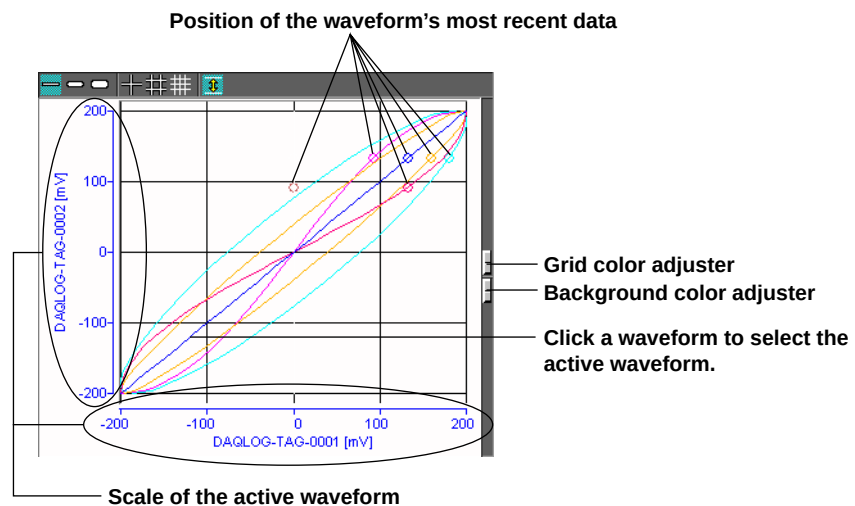


Note

The time for display updating may increase since more time is required for plotting waveforms of thicker lines.

2.8 Operating the Tab Display

The objects that have been set to tab display on ADDOBSERVER Builder are displayed as follows:

Select a tab to switch the display Scroll when all the tabs cannot be displayed

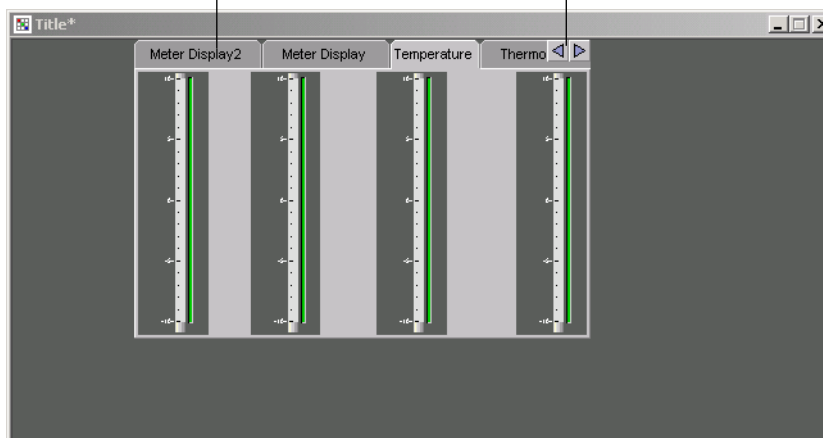


2.9 Operating a Numeric Out Object

The numeric out object sends numerical values to the I/O Channel host.

The numeric out object displays the values from the channels corresponding to output channels.

Procedure

1. If you click a numeric out part in AddObserver panel whose direct output property was turned OFF in AddObserver Builder, the following dialog box appears.

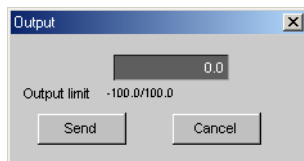

2. Change the value, then click the **Send** button.
Numerical values are sent to the I/O Channel host.

If you click a numeric out part in AddObserver panel whose direct output property was turned ON in AddObserver Builder, the dialog box is not displayed, and the display area of the numeric out part becomes a numeric input screen.

- OFF -

Note


- If an error occurs in I/O Channel, the error is not displayed. Errors are likewise not displayed when communication with the server (I/O channel host) is broken, or if there is a problem between the server and connected instruments.
- If communication with the monitor server fails for some reason such as a cable becoming disconnected during transmission, the output values are not resent even if the cable is reconnected.
- If the server (GateCONTROL) determines that the output value falls outside of the range on the instrument (temperature controller) the value is not sent to the instrument.

2.10 Operating the Selectable Out Object

The selectable out object is used to select strings to which numerical values are registered and send them to the I/O Channel host. The selectable out object selects values from channels that correspond to output channels for strings registered on the builder and displays them.

Procedure

1. If you click a selectable out part in AddObserver panel whose direct output property was turned OFF in AddObbserver Builder, the following dialog box appears.

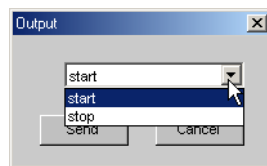


2. Click the list button to select a character string, then click the **Send** button.

The corresponding numerical value is sent to the I/O Channel host.

If an error occurs in an I/O Channel, the error is not displayed. Also, if the value from the channel corresponding to the output channel is not registered, nothing is displayed.

If you click a selectable out part in AddObserver panel whose direct output property was turned ON in AddObbserver Builder, the dialog box is not displayed, and the display area of the selectable out part becomes a setting screen.



Note

- If an error occurs in I/O Channel, the error is not displayed. Errors are likewise not displayed when communication with the server (I/O channel host) is broken, or if there is a problem between the server and connected instrument.
- If communication with the monitor server fails for some reason such as a cable becoming disconnected during transmission, the output values are not resent even if the cable is reconnected.
- If the server (GateCONTROL) determines that the output value falls outside of the range on the instrument (temperature controller), the value is not sent to the instrument.


2.11 Operating Temperature Controller Parts

The temperature controller is a GateCONTROL-specific object. The objects and channels assigned using the models set in GateCONTROL are different, and only existing channels are displayed. Temperature controller parts consist of numeric out, selectable out, alarms, digital meters, and other objects, and clicking numeric out displays a dialog box from which you can edit or send values.

Procedure


1. Click a component object of the temperature controller part created in AddObserver builder.

If you click a temperature controller part in AddObserver panel whose direct output property was turned OFF in AddObserver Builder, the following dialog box appears. Enter a setting and click the Send button.

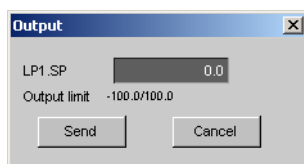


If you click a temperature controller part in AddObserver panel whose direct output property was turned ON in AddObserver Builder, the dialog box is not displayed, and the display area of the temperature controller part becomes a numeric input screen.


For the UP750

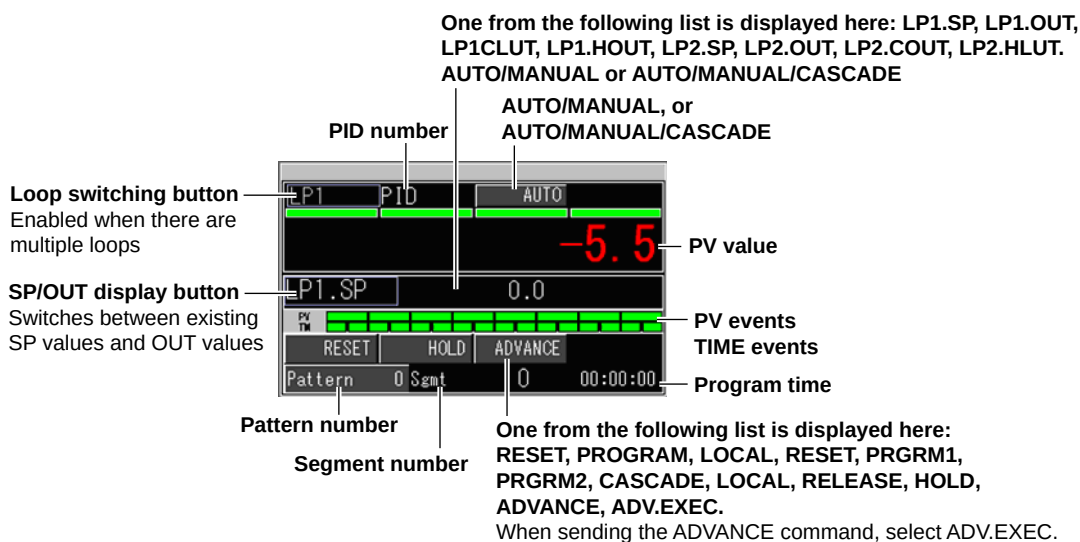

For the US1000

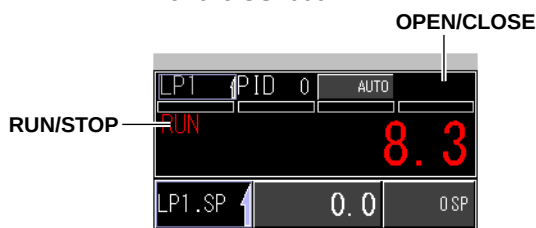

For the UT750

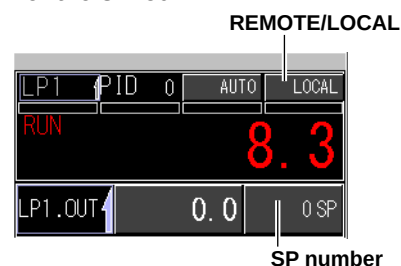

2.11 Operating Temperature Controller Parts

Note

- If an error occurs in I/O Channel, the error is not displayed. Errors are likewise not displayed when communication with the server (I/O channel host) is broken, or if there is a problem between the server and connected instruments.
 - If communication with the monitor server fails for some reason such as a cable becoming disconnected during transmission, the output values are not resent even if the cable is reconnected.
 - If the server (GateCONTROL) determines that the output values fall outside of the range on the instrument (temperature controller), the values are not sent to the instrument.
-

2.12 Playing, Stopping, and Acknowledging Alarm Sounds

You can perform the following operations on panels that have alarm sounds specified.

- Stop the alarm sound (Off).
- Play the sound of alarms that have not been acknowledged (On).
- Acknowledge alarm sounds (ACK)

Procedure


1. Choose **Alarm Sound > On** (or **Off**) or **ACK**.



2.13 Closing the Panel

Procedure

1. Disconnect from the monitor server. For details, see section 2.5.
2. Select **File > Close**, or click the **Close** button on the right corner of the title bar.

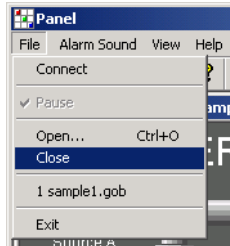


Close button

2.14 Exiting AddObserver Panel

Procedure

1. Choose **File > Exit**.

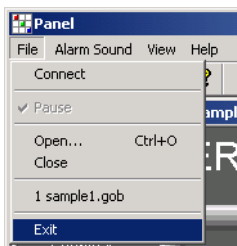

2. If there are no panels open that are connected to a monitor server, AddObserver Panel closes.

If any panels are currently connected, a confirmation dialog box appears. Click **OK** to close the connection.



Then choose **File > Exit** once more to exit the program.

3.1 Error Messages and Their Corrective Actions

The following messages may appear during operation of the software. This section describes the meanings of the messages and the appropriate corrective actions.

Warnings

Code	Comment	Corrective Action
W3902	COB file not found.	-
W3903	Too many connections.	The AddObserver can only connect with up to 16 monitor servers. Close an open panel to decrease the number of connections.

Messages

Code	Comment	Corrective Action
M3553	Connections open.	- Close all connections?
M3566	Successful in login.	-
M3567	Password is not accord with user name.	Enter the correct user name and password.
M3901	File not checked. OK to continue?	Check and fix the data using the AddObserver Builder ¹ Please contact your sales representative.

¹ Please inquire with one of our representatives for more information on the AddObserver Builder.


3.2 Checking the Version of the AddObserver Panel

Procedure

Choose **Help > About**.



The version number and other information is displayed.

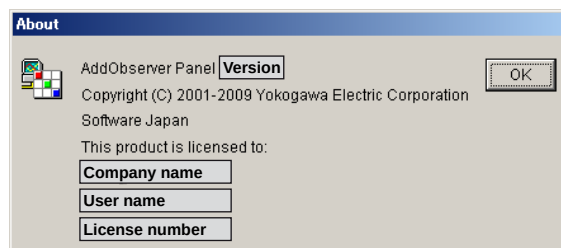

Index

A

AddObserver Runtime	1-1
alarm.....	2-9
alarm sound.....	2-19
analog meter.....	1-3
analog meter set.....	1-3
auto zone.....	2-11

B

background color	2-13
bar meter	1-2
bar meter set	1-3

C

channel number.....	2-4
clip	2-12
.cob file	2-2
communication status.....	2-3
connecting to the monitor server	1-9, 2-3
curtain.....	2-13

D

DAQ32 Plus.....	1-1, 1-9
DAQEXPLORER	1-1, 1-9
DAQLOGGER	1-1, 1-9
digital	1-2
digital meter set.....	1-3
disconnecting from the monitor server	2-6
display limit.....	2-12

E

edit zone.....	2-10
error message	3-1
example panel	1-2
exiting DAQOBSERVER panel.....	2-21

F

full zone	2-10
-----------------	------

G

GateCONTROL	1-9
GateCONTROL-specific object	2-17
GateEye.....	1-1, 1-9
.gob file.....	2-2
grid color.....	2-13

I

indicator	1-2
-----------------	-----

L

label display.....	2-4
license number	3-2

M

medium line	2-12
message.....	3-1
meter set.....	1-3

monitor server.....	1-8
multi-axes zone	2-11
MXLOGGER.....	1-1, 1-9

N

normal line	2-12
numeric out object	2-15

O

opening the panel.....	2-2
------------------------	-----

P

panel object	1-2
pausing the panel display.....	2-5
PC system	1-7
picture.....	1-4

R

reconnecting to the monitor server	2-6
resuming the panel display.....	2-5

S

scroll bar	2-13
selectable out object.....	2-16
slide zone	2-11
software license.....	ii
starting DAQOBSERVER panel	2-1

T

tab display	2-14
tag comment.....	2-4
tag number	2-4
temperature controller parts	2-17, 2-18
Terms and Conditions of the Software License	ii
thermometer	1-3
thermometer set	1-3
thick line.....	2-12
trend graph	1-4
trend graph display method.....	2-8

U

user zone.....	2-10
----------------	------

V

value rectangle	1-2
version.....	3-2

W

warning	3-1
---------------	-----

Y

Y-axis display zone.....	2-10
--------------------------	------

Z

zoom in.....	2-9
zoom out.....	2-9